


# 1D Laser Barcode Scanner User Manual

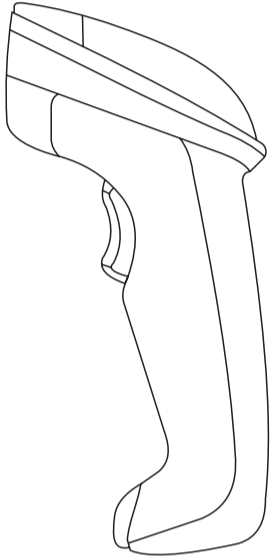

This manual is simplified ,for detailed manual information please download the completed user manual from our website or obtain it from our distributor.

## Factory Default



Note:Default interface:USB-HID

Setting Procedure:  
Scan required bar codes

Example: Factory default,USB-HID,add suffix "Enter"ect barcode as below

### 1 Factory Default



### 2 Enter



### Interfaces



USB-IHD



USB-COM



PS2



RS232

### Scan Mode



Manual



Continuous



Automatic Flashing

### Auto-Induction



ON



OFF

### Buzzer



OFF



ON



Low



High

### Image Inverted



Direct



Reverse

### Keyboard Language



USA



UK



French

### Suffix Setting



Enter



Enter&Line feed



Cancel

### USB-COM, RS232 Baud Rate Setting



4800



9600



19200



38400



57600



115200

### Barcode Setting



Enable Code 39



Disable Code 39



Enable UPC-A



Disable UPC-A



Enable UPC-E



Disable UPC-E



Enable EAN-13



Disable EAN-13



Enable EAN-8



Disable EAN-8



Enable Code-93



Disable Code-93



Enable Code-128



Disable Code-128



Enable Codabar



Disable Codabar



Enable Interleaved 2 of 5



Disable Interleaved 2 of 5



Enable Industrial 25



Disable Industrial 25



Enable MSI



Disable MSI



Enable Plessey



Disable Plessey



Enable Code-11



Disable Code-11



Enable Matrix 2 of 5



Disable Matrix 2 of 5



Enable Postcode 25



Disable Postcode 25



Enable Aviation 25



Disable Aviation 25



Enable GS1 Omnidirectional



Disable GS1 Omnidirectional



Enable GS1 Limited



Disable GS1 Limited